



Reset
 Digital 4
 Digital 3
 Digital 2
 Digital 1
 Shift Over Ride
 Stage 8
 Stage 7
 Stage 6
 Stage 5
 On/Off
 Start
 Tach
 GND

Stage 1
 Stage 2
 Stage 3
 Stage 4
 Battery

